




4PCS LED COB AUDIENCE LIGHT

USER MANUAL

1. Digital Display:

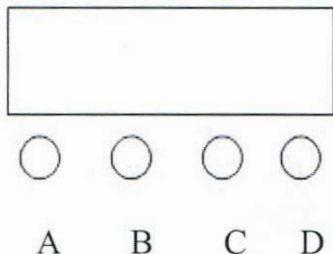

- A. Menu
- B. Up
- C. Down
- D. Enter
- E. LED Display Window

Operation Description: Press function key A to cycle out 9 different functions, the first two digits of digital tube represent the current function (refer to menu). The last two digits represent the address of the function or the parameters of the speed. Press B or C to change the parameter value. Press the D key to confirm.

2. LED Display Window Function. (All the functions are selected and then press the D key to confirm)

No.	Display	Function
1	A001	8Channelsaddress code, (001—512) B、C up down address code value
2	D001	4Channelsaddress code, (001—512) B、C up down address code value
3	H001	2Channelsaddress code, (001—512) B、C up down address code value
4	h001	1Channelsaddress code, (001—512) B、C up down address code value
5	CC00	Running pattern (01—06) B、C Key to modify the running pattern
6	LL00	Running speed (01—99) B、C modify jump change speed
7	CP00	Gradual change, (01—99) B、C modify pulse, gradual change speed
8	dE00	Pulse, (01—99) B、C modify pulse, gradual change speed
9	bEb1	Sound-activated
10	W255	W Select color, (000—255) B、C modify select color
11	-ON- / -OFF	On/Off

3. DMX512Channels (8ch)

Channels	Function	Description
CH1	Dimmer	W1,W2,W3,W4,Dimmer Linear dimming, From dark to bright
CH2	W1 dimmer	W1 dimmer, Linear dimming, From dark to bright
CH3	W2 dimmer	W2 dimmer, Linear dimming, From dark to bright
CH4	W3 dimmer	W3 dimmer, Linear dimming, From dark to bright
CH5	W4 dimmer	W4 dimmer, Linear dimming, From dark to bright
CH6	Strobe	W1.W2,W3,W4,Strobe fromslow to fast
CH7	Select function	0—50: DMX Channels; 51—100: jump change; 101—150: gradual change; 151—200: pulse; 201—255: Sound-activated
CH8	Function speed	Function speed, from slow to fast

5. DMX512 Channels(4ch)

Channels	Function	Description
CH1	W1 dimmer	W1 dimmer, Linear dimming, From dark to bright
CH2	W2 dimmer	W2 dimmer, Linear dimming, From dark to bright
CH3	W3 dimmer	W3 dimmer, Linear dimming, From dark to bright
CH4	W4 dimmer	W4 dimmer, Linear dimming, From dark to bright

6. DMX512 Channels(2ch)

Channels	Function	Description
CH1	Dimmer	W1,W2,W3,W4,Dimmer Linear dimming, From dark to bright
CH2	Strobe	W1.W2,W3,W4,Strobe fromslow to fast

7. DMX512 Channels(1ch)

Channels	Function	Description
CH1	Dimmer	W1,W2,W3,W4,Dimmer Linear dimming, From dark to bright

8. Specifications:

Input Voltage:AC85~265V,50-60Hz

Power:400W

Light Source: 4pcs 100W high brightness COB LED

DMX Channels:1/2/4/8CH

Control Mode:DMX512,Auto,Master/Slave,Sound active

Color Temperature:3200K(Warm White)

Size:41*40*25CM

Weight:9.5KGS

9. Features:

Operation is very simple, user-friendly design, dimming without flicker, shutter and so on. Can be adapted to photography, photography, television and other demanding lighting occasions.